


SPEEDWIRE

SYSTEMS.COM™

6 Bay Relay Controller

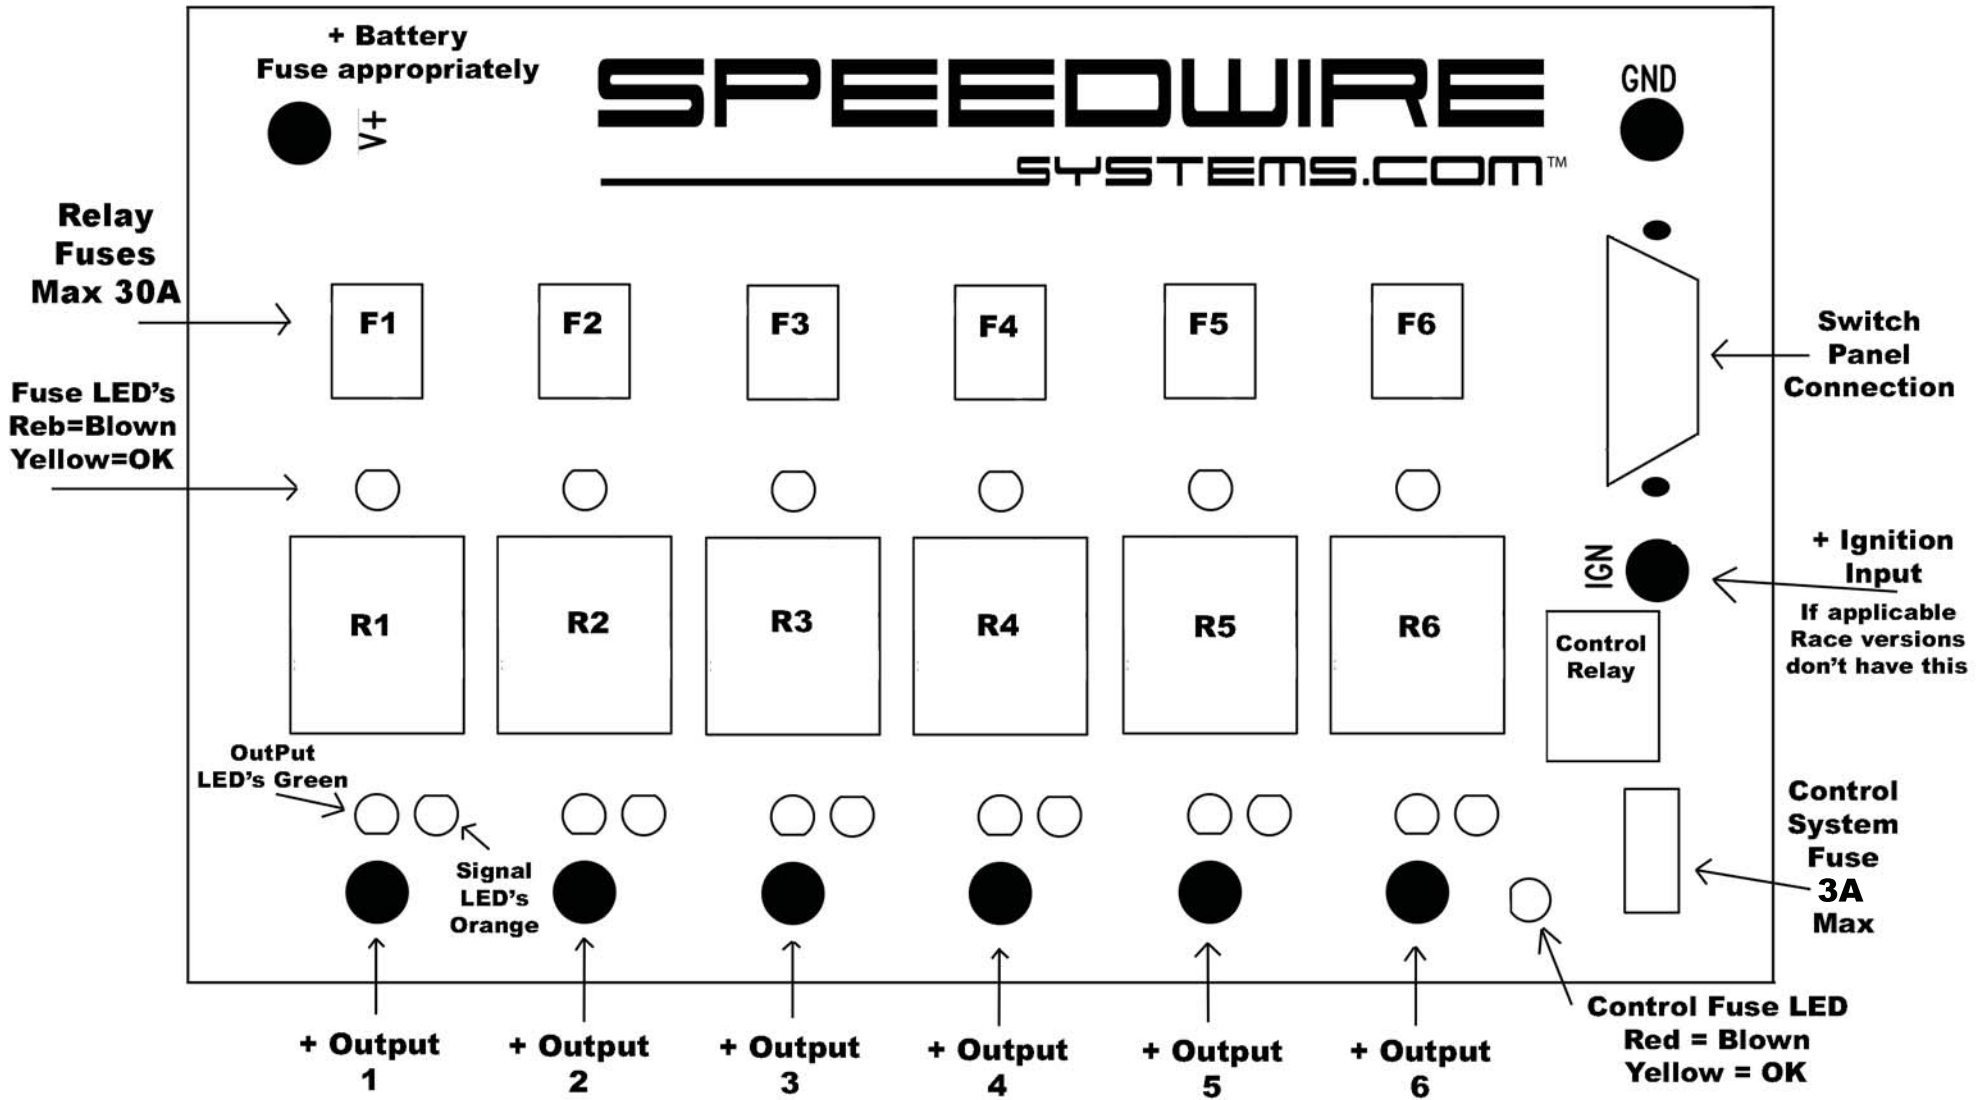

Speedwire Systems 6 bay relay controller:

All connections must be wired correctly, ie (+ to +) (- to -)

The main battery connection must be fused appropriately within 12inches of the battery.

Use all appropriate wire sizes depending on your load see AWG(American Wire Gage) chart for reference.